



INSTALLATION ISTRUCTIONS

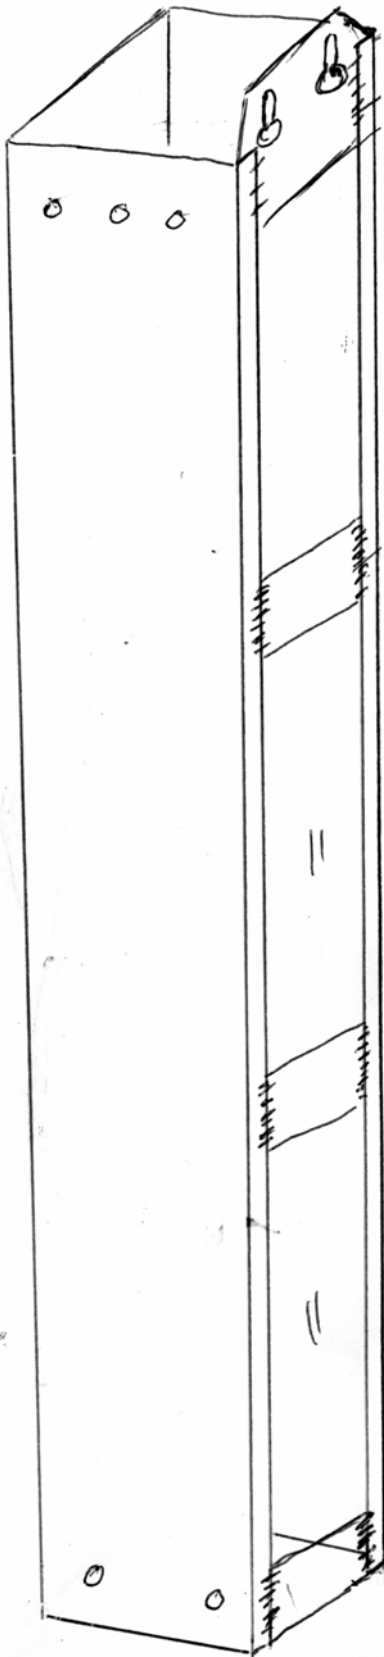

B DRILLING MARKS

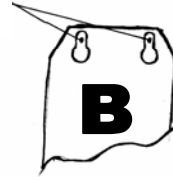

1. Place the reel not further than 6 feet from the pist on a vertical even surface (stone, concrete, brick, wood or metal).
2. Mark the drilling holes of part "A" 0-15" from the floor.
3. The anchor attached can be used only on brick, concrete or stonewalls. Please ask an expert how to use on other surfaces.
4. Drill 2½" deep Ø 3/8" into the drilling marks.
5. Hammer the anchor in its place. Install part "A" with the provided screw.
6. Slightly lifting the reel put it on part "A". While keeping it vertically and pushing it to the wall mark the drilling holes for part "B".
7. Lift the reel from part "A".
8. Drill 2½" deep Ø 3/8" into the drilling marks.
9. Hammer the anchor in its place, put part "B" on it and fix it by using a screw.
10. While hanging the reel on part "A" and lifting it gently, hang it on part "B" as well.
11. Secure the reel by screws to part "A" below and to part "B" above. The screw-heads must slip to the narrow upper part of the slot on part "B".
12. The wall shall be even for proper installation.
13. Connect the reel to the signaling apparatus.

DRILLING MARKS

